

LXNAV remote

control stick

Installation manual Version 1.0



LXNAV d.o.o. • Kidričeva 24a, 3000 Celje, Slovenia • tel +386 592 33 400 fax +386 599 33 522

info@lxnav.com • www.lxnav.com

1 Technical Data


- Power input 8-18V DC
- Consumption at 12 V: 60mA
- Weight 300g

2 Installation

LXNAV remote stick is connected to RS485 bus through RS485 splitter.



Be careful, that connect correct color wire to pin, which is marked with same color.

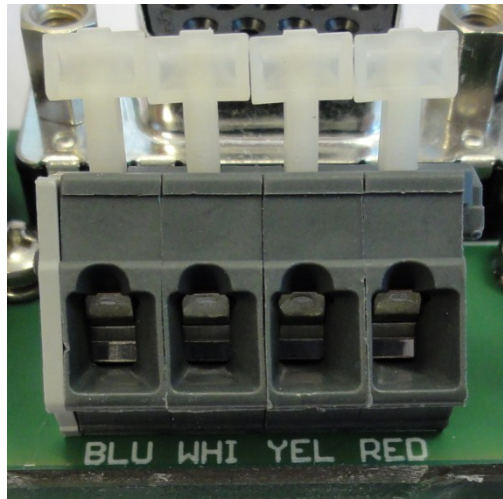


PTT wires are connected to radio, SC is connected to Speed to fly input of vario unit.



If you are installing remote stick into double seater gliders or aircraft, be careful. Stick for rear seat is marked as DS. DS remote stick is programming to control repeater unit, which is installed on 2nd seat.

3 Functions

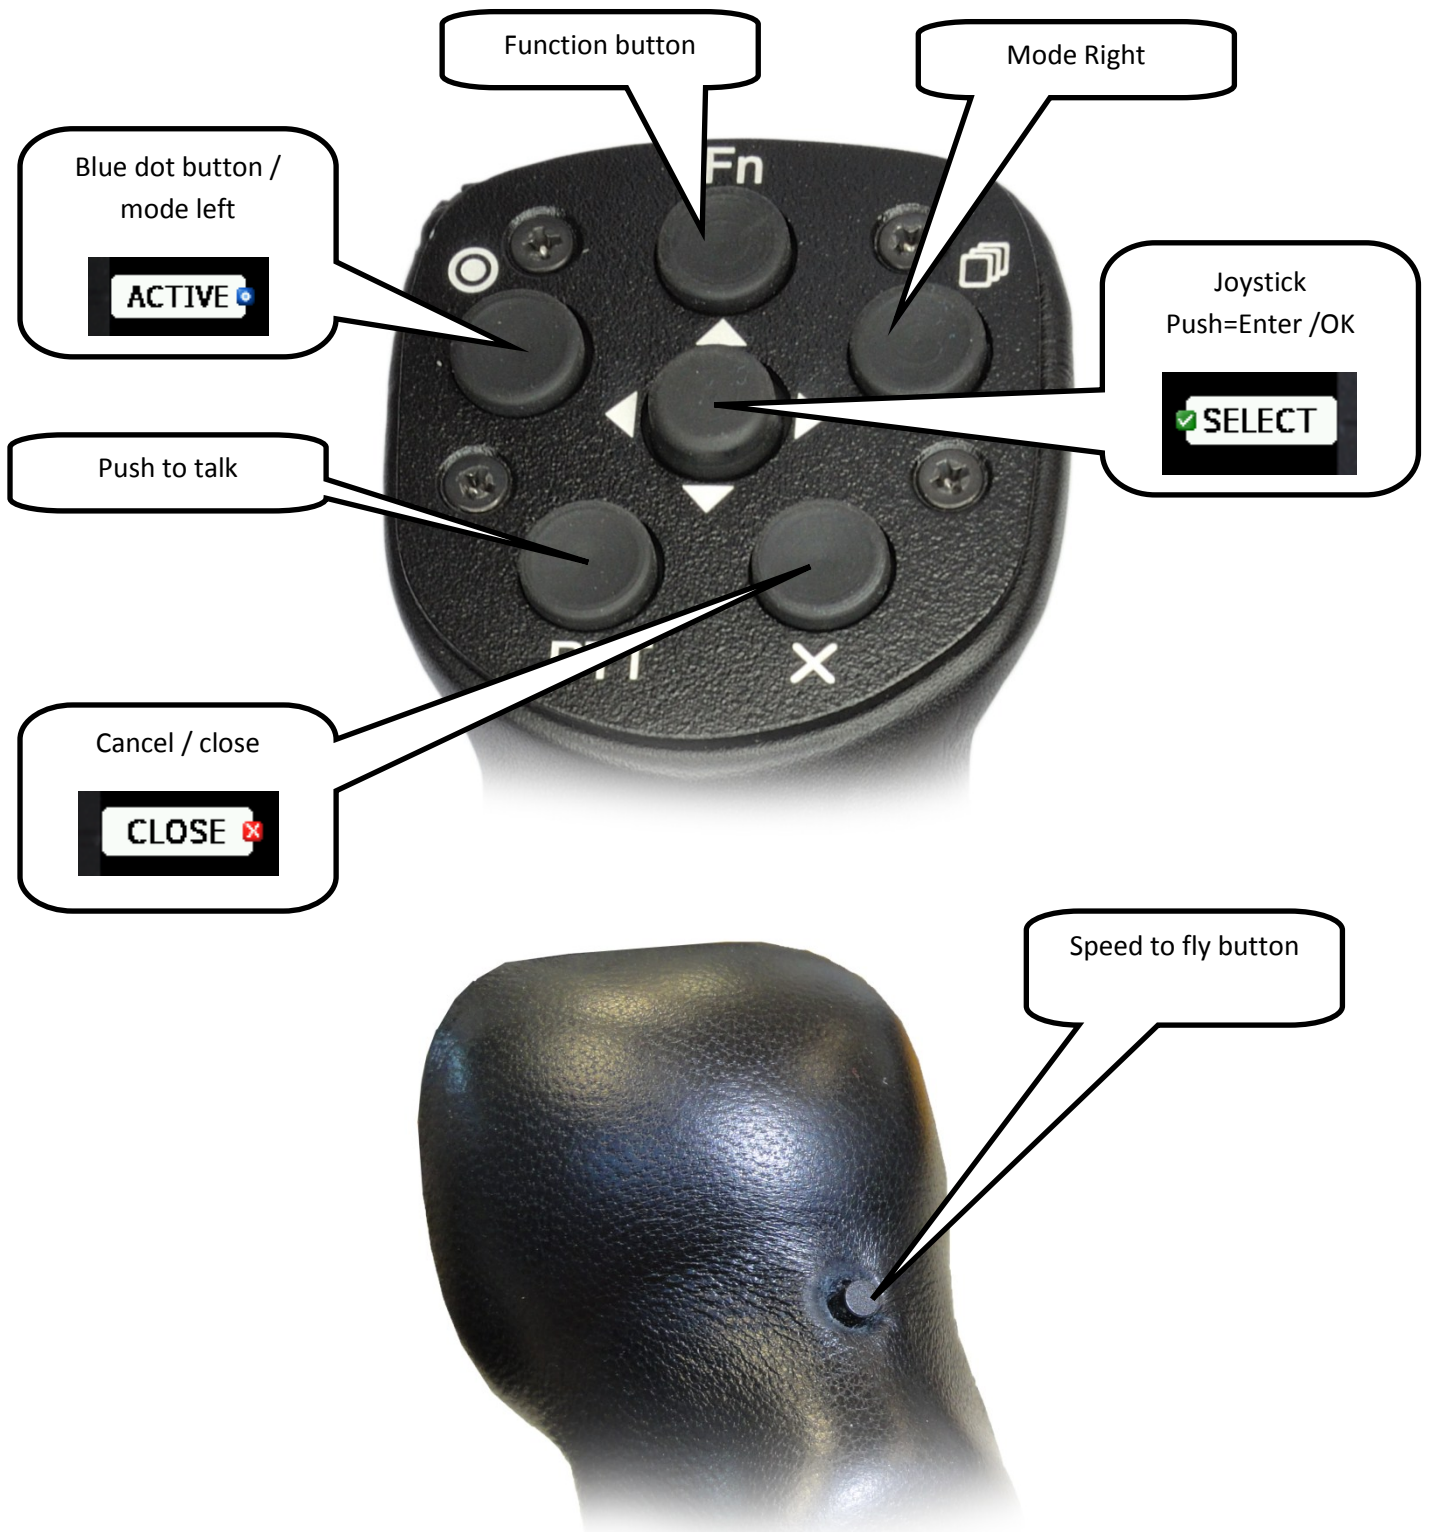

Function button is custom button, which function can be set by user in setup – hardware – remote stick.